 




PB-9807C

CD/MP3 PLAYER

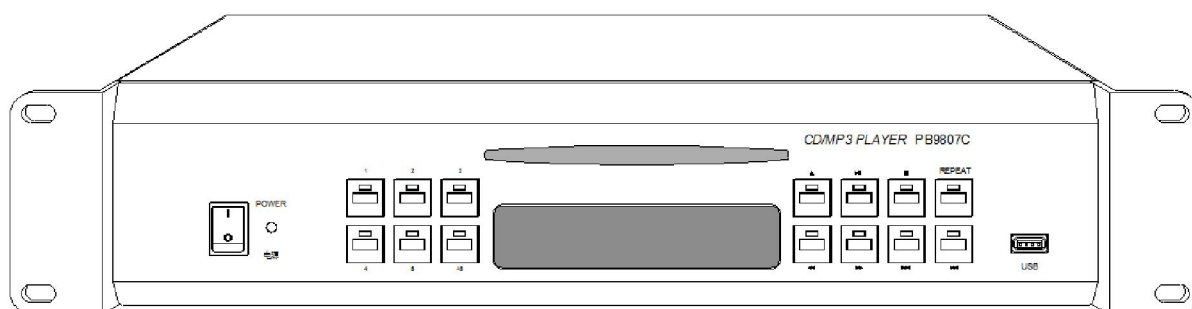

 
OWNER'S MANUAL

Before operating, please read this manual completely.

FEATURES


- **CD/MP3/MP4/VCD/DVD player.**
- **VFD display.**
- **Can select any song or any paragraph for play.**
- **After the POWER ON it will play in order automatically.**

FRONT PANEL

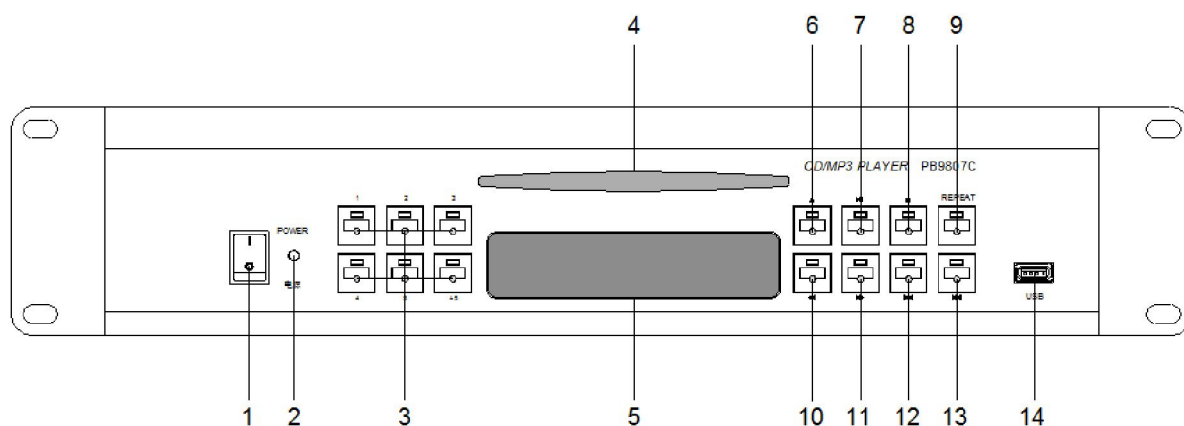

- | | |
|--|---------------------|
| 1 Power switch(1 is power on and the “power LED” is on) | 8 Stop keys |
| 2 Power indicator | 9 Repeat keys |
| 3 1 to +5 keys | 10 Search up keys |
| 4 Disc door | 11 Search down keys |
| 5 Display screen | 12 Skip up keys |
| 6 Open keys | 13 Skip down keys |
| 7 Play/pause keys | 14 USB jack |

 REAR PANEL

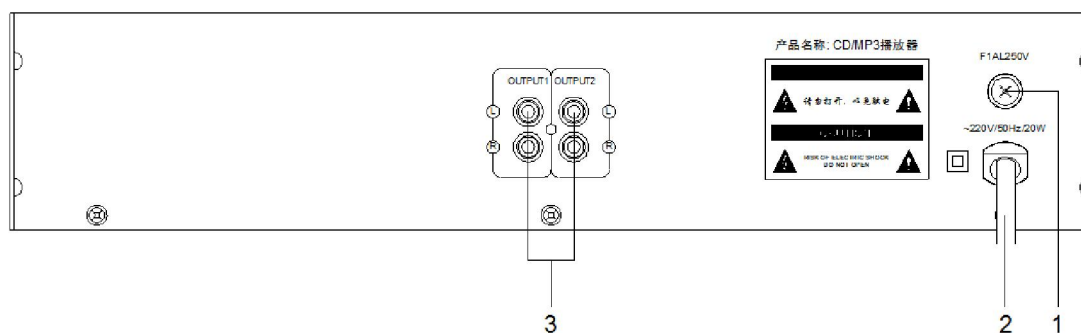

- | | |
|-----------------|---------------|
| 1 AC power cord | 3 Output jack |
| 2 AC fuse | |

Notice: DVD part of the machine can only output audio signal and has not video frequency broadcasting function.


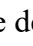

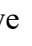

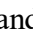
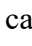



OPERATION4

The setup can play CMF format such as CD、MP3、VCD、DVD ,etc. In this equipment .the mode to provide CMF for setup has CD、MP3、VCD、DVD dishware and mobile hard disk which connected with USB jack, etc . when this two supply modes concurrence in equipment ,the equipment will read and play the CMF on dish first; when the dish is taken out from dish storehouse , the

equipment will read and play the MP3 CMF which connected with USB port again; while setup is playing MP3 CMF on the mobile hard disk now. At this moment if another dish is put in the dish storehouse, the equipment will read and play the CMF on dish once again.

Press the “POWER” and turn on the equipment, if there is a dish in storehouse or have a USB disk inserted into the USB port , it can search automatically and play the CMF from them; If there is no seemly play music file in the memory ,then, if you press whichever operation button of MP3,the display screen will display “NO DISC ”.

When some CMF format is playing, this format will be lit on the display screen to show the carry . For example : The setup is now playing the MP3 format CMF, “MP3” will be lit on the display screen.

1. Disk Load / Unload Press key  to open the CD deck, put in or take out a disk and then press key  again for resetting the deck.
2. Play or Pause After the deck reset it will play in order automatic ally .Press key  while playing for pause, Press the key again for releasing.
3. Option Play Press  or  and  or  while playing, we can select any song or any paragraph for play.
4. Stop Press key  to stop in any time.
5. Play Repeatedly When the equipment play the song sequentially, Press REPEAT key once, it will get into the function of repeat mode selecting, and no change have been taken place on the screen. Press REPEAT key once again, it will start the function of the single track and current track play, and “  ” icon will be displayed on the screen. Press REPEAT key for the 3rd time, it will play the whole disc repeatedly, If there is folder exist on the disc, after press REPEAT key the 3rd time, equipment will play the current folder repeatedly and “ALL” icon will be displayed on the screen, and if press REPEAT key for the fourth time at the time, it will play the whole disc repeatedly and “ALL  ” icon will be displayed on the screen, and if press REPEAT key for the fifth time, it will abolish the setting and cancel the repeated mode. If there is no folder on the disc, after press REPEAT key for the fourth time, it will abolish the setting and cancel the repeated mode.

SPECIFICATIONS

Frequency response	20Hz-20kHz(± 3 dB)
Signal to Noise Ratio	90dB
Dynamic range	90dB
THD	0.005%
Wow & Flutter	Under the limited level
Output level	0dBV
Protection	AC fuse
Power Requirement	AC220-240V/50-60Hz
Outer Packing Size (mm)	(L×W×H) 530×440×195
Unit Size (mm)	(L×W×H) 484×365×88
Gross weight	8.7kg
Net weight	6.9kg

Specifications are subject to be changed without notice.

CAUTION

- When the “Power switcher” is off, please pull out the power cord from the socket. Please keep the equipment out of water.
- To reduce the risk of electric shock, do not remove the cover.
- No user parts inside. Refer servicing to qualified service personnel.

LY International Electronics Co., Ltd.